

LIFFU PA SERIES REMOTE CONTROL HOIST INSTRUCTIONS

29 January 2021

HOW TO PAIR THE REMOTE TO THE HOIST

At first use the remote control and the hoist must be paired so they are coded together and can communicate. This is a one-off procedure when the hoist is first used.

1. Power off the hoist.
2. Remove one of the batteries from the remote control, it doesn't matter which one.
3. Whilst holding down the STOP and UP buttons put the battery back in. Release the buttons. The red light on the remote will flash quickly.
4. Power on the hoist. The green light on the hoist will come on, the remote is now ready for pairing.
5. Press and release the UP button. Press and release the DOWN button. The green light on the remote will flash 2 times and the green light on the hoist will go out. The remote is now paired with the hoist.

OPERATION

1. Make sure the green safety switch is in the ON position.
2. Press and hold the START button for 6 seconds. The light will flash red until the remote has switched on then it will flash green. The remote has a 10 minute auto power off after which you need to press the start button again for 6 seconds.
3. Press the UP or DOWN button and the hoist will act accordingly.
4. When finished using the hoist press the STOP button to avoid accidental operation. To use again the START button will need to be pressed for 6 seconds.

NOTES

Remote Control LED

Green Transmitting
Red Not transmitting

Hoist LED's

Red Power on
Green Receiving signal from remote control

1. The green switch at the bottom of the remote is not an on/off switch, it is a safety switch. When in the OFF position the remote cannot be started, but the red light will still flash if the buttons are pressed.
2. Only one remote can be paired at a time. The most recent remote to be paired will overwrite any other pairings.

3. Once a remote is paired the batteries can be replaced and the hoist powered off/on without needing to repeat the pairing process.
4. To disable the remote control for safety reasons turn the green switch to the PLUCK position and pull out the key and keep in a safe place.
5. If the remote won't be used for a long time (more than 2 months) then remove the batteries to stop them draining.
6. Use only good quality alkaline batteries. They are much less prone to leaking when flat.

This document is copyright Testntools Limited www.testntools.co.nz