

# LIFFU PA SERIES REMOTE CONTROL HOIST INSTRUCTIONS

15 May 2023

Version 2 - Minor updates to the status of the LED's whilst pairing the remote to the hoist.

## HOW TO PAIR THE REMOTE TO THE HOIST

At first use the remote control and the hoist must be paired so they are coded together and can communicate. This is a one-off procedure when the hoist is first used.

1. Power off the hoist.
2. Remove one of the batteries from the remote control, it doesn't matter which one.
3. Whilst holding down the STOP and UP buttons put the battery back in. Release the buttons. The red light on the remote will flash quickly, then slow.
4. Power on the hoist, it is now ready for pairing with the remote.
5. Press and release the UP button. Press and release the DOWN button. The remote is now paired with the hoist.

## OPERATION

1. Make sure the green safety switch is in the ON position.
2. Press and hold the START button for 2 seconds. The light will flash red until the remote has switched on then it will flash green. The remote has a 10 minute auto power off after which you need to press the start button again for 2 seconds.
3. Press the UP or DOWN button and the hoist will operate accordingly.
4. When finished using the hoist press the STOP button to avoid accidental operation. To use again the START button will need to be pressed for 2 seconds.

## NOTES

### Remote Control LED

Green Transmitting

Red Not transmitting

### Hoist LED's

Red Power on

Green Receiving signal from remote control

1. The green switch at the bottom of the remote is not an on/off switch, it is a safety switch. When in the OFF position the remote will not transmit, but the red light will still flash if the buttons are pressed.
2. The hoist will only pair with the serial number of one remote at a time. The most recent remote to be paired will overwrite any other pairings.

3. A hoist will only accept one remote at a time, but one remote can be paired with multiple hoists.
4. Once a remote is paired the batteries can be replaced and the hoist powered off/on without needing to repeat the pairing process.
5. To disable the remote control for safety reasons, turn the green switch to the PLUCK position and pull out the key and keep in a safe place.
6. If the remote won't be used for a long time (more than 2 months) then remove the batteries to stop them draining.
7. Use only good quality alkaline batteries. They are much less prone to leaking when flat.

This document is copyright Testntools Limited [www.testntools.co.nz](http://www.testntools.co.nz)